

9 Position the GripLock™ buckle so the black cylinder pad (with Apeks logo) is facing up. Insert the cylinder band through the slot in the GripLock™ buckle, secure hook and loop material (Figs. 13 & 14).

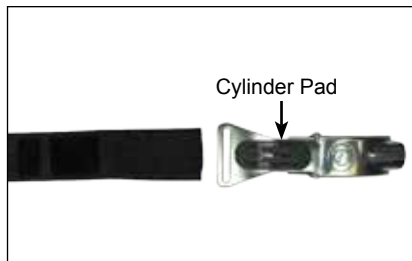


Figure 13



Figure 14

### BLACK ICE TWIN CYLINDER SETUP COMPLETE



**CONSULT THE BLACK ICE OWNER'S MANUAL THAT CAME WITH YOUR BC FOR INFORMATION ON MAXIMUM CYLINDER CAPACITY, ADJUSTING / SECURING THE GRIPLOCK™ CYLINDER BANDS AND VALVE STRAPS.**

If you have any questions regarding the information found in this manual, please contact your regional Apeks Dealer or Distributor. Distributor contact information is available on the Apeks website at [www.apeks.co.uk](http://www.apeks.co.uk)



## Apeks Black Ice Twin Cylinder Kit PN 427106

Contents:

- (1) Valve Strap
- (2) Removable Buckles
- (1) Twin Cylinder Block
- (1) GripLock™ Cylinder Band



### Installation of Black Ice Twin Cylinder Kit

**READ ALL INSTRUCTIONS PRIOR TO ASSEMBLY**

**1** Unbuckle the valve strap and locate valve strap loops. These are sewn into the harness on both sides of the valve strap slot (Fig. 1).



Figure 1

**2** Insert open end of removable buckle through the valve strap loop. Lock the end of the removable buckle. Repeat the process for other side (Figs. 2 & 3).



Figure 2

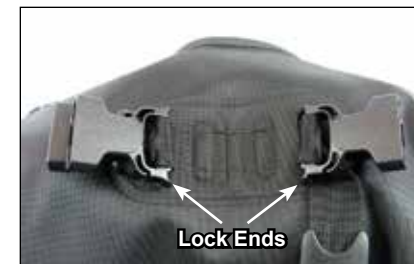


Figure 3

**3** Connect one end of the valve strap with two male buckles to the outer female buckle on left side of the BC (Fig. 4).

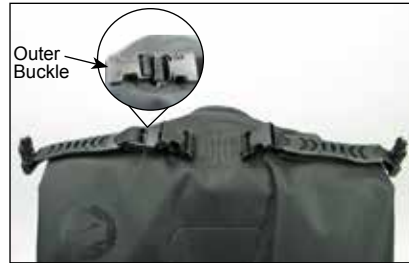


Figure 4

**4** Remove both GripLock™ buckles from the cylinder bands (Fig. 5).



Figure 5

**5** There are four cylinder band slots (1-4) in the Wrapture Harness, each GripLock™ cylinder band will use two of the slots (Fig. 6).

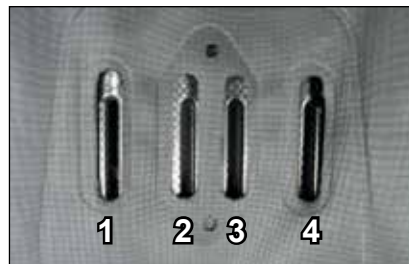


Figure 6



**CAUTION:** It is essential to weave the GripLock™ cylinder bands through the slots in the correct order and direction. Failure to do so will result in improper set up of the Black Ice twin cylinder kit.

**6** Lay the cylinder band with the hook and loop side face-up. Insert the square end of the cylinder band into slot (2) (Fig. 7). Turn the BC over and lift up the back pad. Place the twin cylinder block directly over slots (2 & 3) under the back pad. Insert the strap through the metal slide of the cylinder block and out slot (1) (Fig. 8). Feed enough webbing through to reattach the GripLock™ buckle.



Figure 7



Figure 8

**7** Position the GripLock™ buckle so the black cylinder pad (with Apeks logo) is facing up. Insert the cylinder band through the slot in the GripLock™ buckle, secure hook and loop material (Figs. 9 & 10).

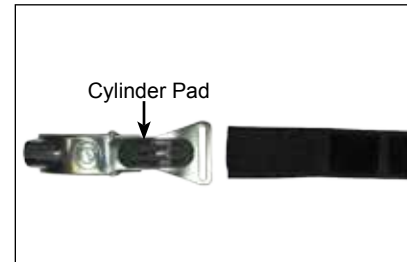


Figure 9



Figure 10

**8** Lay the cylinder band with the hook and loop side face-up. Insert the square end of the cylinder band into slot (3) (Fig. 11). Turn the BC over and lift up the back pad. Insert the strap through the metal slide of the cylinder block and out slot (4) (Fig. 12). Feed enough webbing through to reattach the GripLock™ buckle.



Figure 11



Figure 12